


937002, 937003

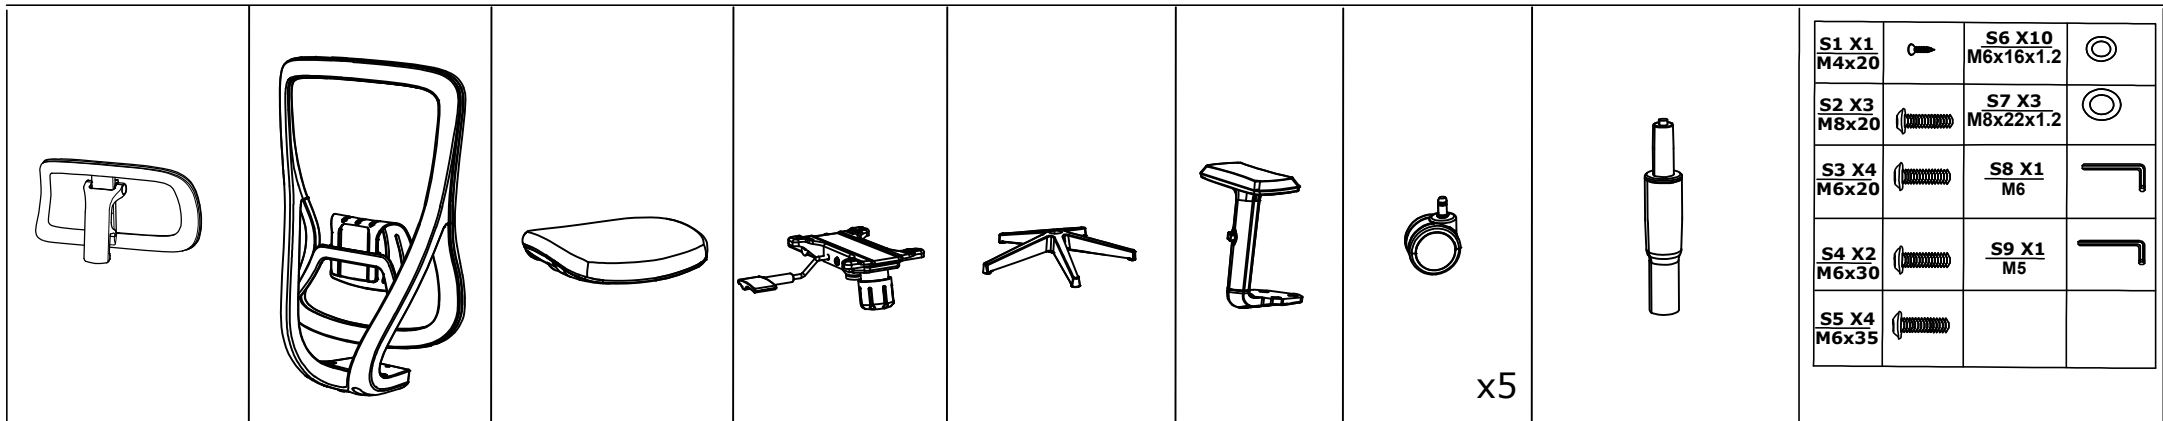

S1 X1 M4x20		S6 X10 M6x16x1.2	
S2 X3 M8x20		S7 X3 M8x22x1.2	
S3 X4 M6x20		S8 X1 M6	
S4 X2 M6x30		S9 X1 M5	
S5 X4 M6x35			

x5


1.

2.


3.

4.


5.

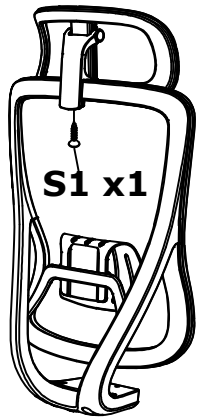


S1 x1

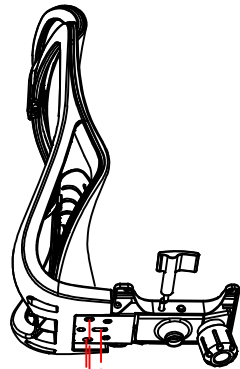


S7 x3
S2 x3

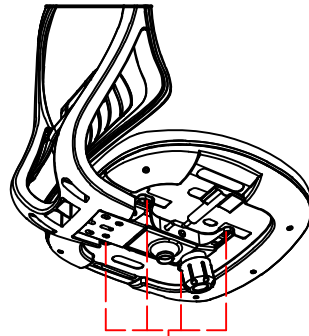

S6 x4
S3 x4

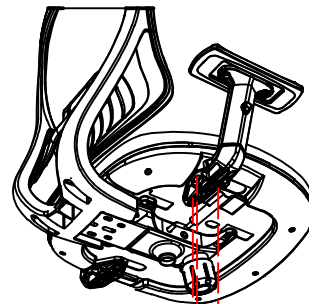

S6 x1
S4 x1
S6 x2
S5 x2

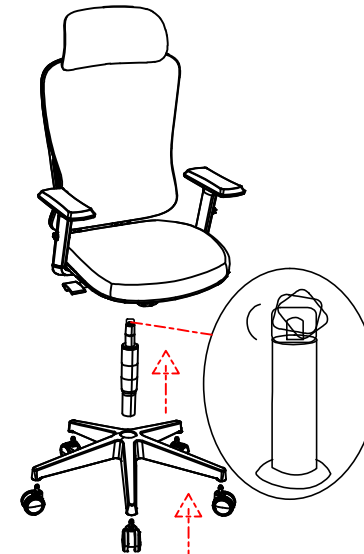

CZ: Odstraňte plastovou krytku.
SK: Odstráňte plastovú krytku.
PL: Zdejmij plastikową nasadkę.
DE: Entfernen Sie die Kunststoffabdeckung.

